 


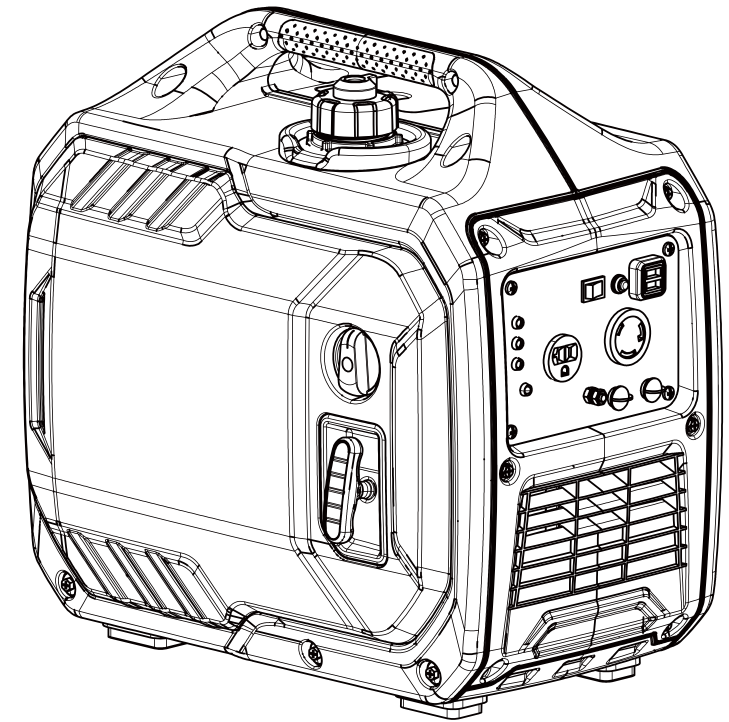

Jackson, Wisconsin

Website: www.novuspowerequipment.com

Email: Support@novuspowerequipment.com

Toll-Free Phone: 800-409-7802

2025 V01

NV2300iS

INVERTER GENERATOR

QUICK START GUIDE

2025 V01

UNBOXING



CAUTION:

Unit may exceed 40 lbs. Recommend a two-person lift, if required.

1. Remove any banding and open the carton/box from the top.
2. Remove all packing and inserts. Remove all loose packed items and set separately to the side.
3. Carefully lift the generator out from the carton/box and place the unit on the ground or other solid surface. Note: Do not discard packaging until you have confirmed the Oil Bottle (0.35L – 12oz 10W-30), Funnel with tube and Operator's Manual are present.

 
ASSEMBLY




Important Note:

Engine is shipped from the factory without oil. Engine Oil Must be added prior to operating generator.

1. Place the generator on a flat and level surface. Using the supplied funnel and hose, add the entire bottle (.35L / 12oz) of Oil to the engine. The oil fill location on this unit is located behind the oil cover plate on the right side of the generator. (shown below)

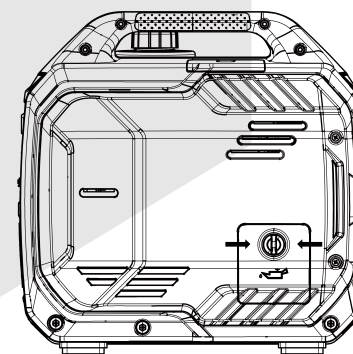

 Turn cover lock screw counterclockwise ¼ turn to unlock. Pull door down to open.

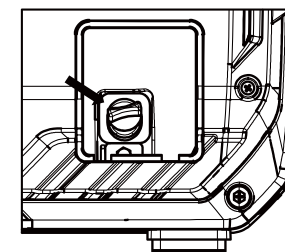

Remove oil dipstick. Add oil to the engine at this location.



READ AND UNDERSTAND THE OPERATOR'S MANUAL AND ALL SAFETY WARNINGS BEFORE USE

Quick Start Guide Contents

- Unboxing
- Assembly Instructions
- Starting and Operating Procedures

 
 
If you require assistance during setup or operation of your new Inverter Generator, please contact our customer support team toll-free at (800) 409-7802 or email at support@novuspowerequipment.com

2. Add fresh, regular unleaded gasoline with a minimum of 87 octane and a maximum of 10% ethanol to the fuel tank.




Important Note:

Avoid overfilling the fuel tank. Do not exceed the "Red" line of the fuel screen inside the fuel tank opening. (fuel tank capacity is 1.2 gal)

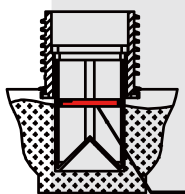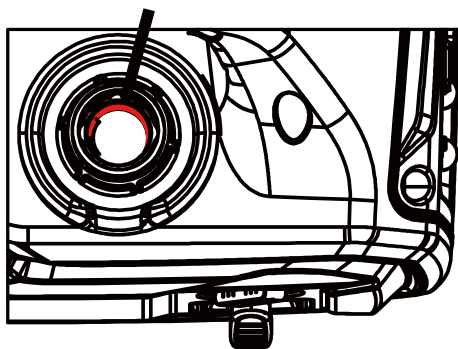

Do Not Fill
Above this Line

 3. Collect and retain the model and serial number from the unit. The model and serial number are located on the side maintenance cover of the generator.

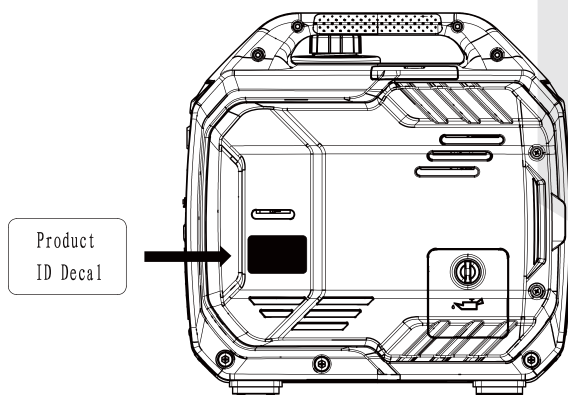

Congratulations, your machine is now ready to operate.

Please read the entire operator's manual for full safety and operations guidelines.

STARTING AND OPERATING PROCEDURES

This section of the quick start guide provides the basic instructions on how to start and operate your new Inverter Generator. This quick start guide is not a comprehensive guide, we recommend the operator's manual is read and understood before using your new equipment.

 
 
UNIT PREPARATION

Prior to starting the generator, always check the following.

1. Check the engine oil level, add if necessary.
2. The fuel tank has fresh, unleaded 87 octane gasoline containing up to a maximum of 10% ethanol.
3. The generator must be located outdoors in an open well-ventilated area away from windows, doors & vents.
4. All electrical loads are disconnected from the generator.
5. Place the ECO switch (On the control panel) is in the OFF position. "O" side if switch is depressed downward.

STARTING THE GENERATOR

1. Set the fuel cap vent switch to the ON position. Turn the Engine Control Switch (side of generator) clockwise to the "Choke" position.

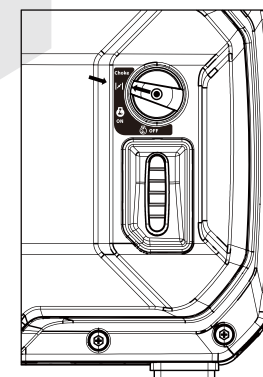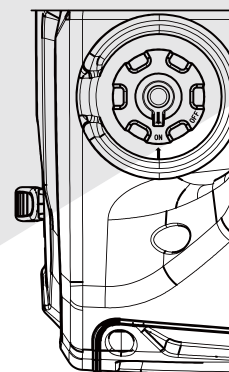


KEY FEATURES

2. Start the engine by pulling the recoil starter handle out slowly until resistance is felt, then pull rapidly.

3. Once the engine starts, turn the Engine Control Switch counterclockwise to the "ON" position.



 Allow the generator to run for 30-50 seconds with the engine running smoothly before connecting an electrical load.

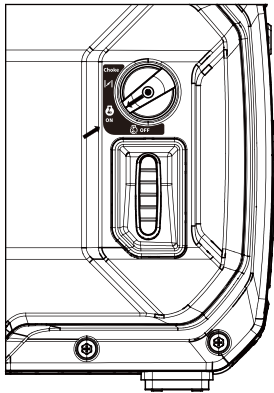

Allow Generator to run for 30-50 seconds with the engine running smoothly, before connecting an electrical load.

STOPPING THE GENERATOR

1. Turn Off all electrical appliances connected to the generator.
 2. Remove all plugs / cords from the generator.
 3. Turn the Engine Control Switch knob counterclockwise into the "OFF" position.
- Allow the generator to cool down prior to moving it to any enclosed area.

