


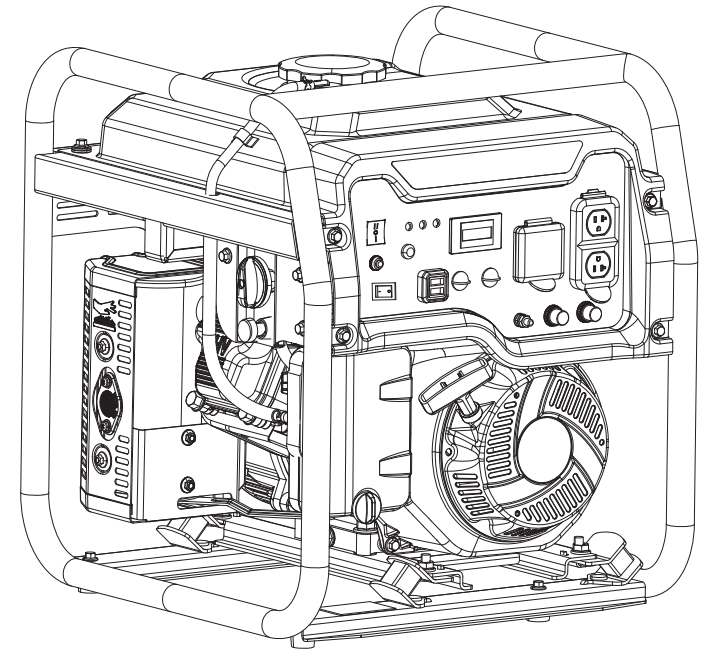

Jackson, Wisconsin
Website: www.novuspowerequipment.com
Email: Support@novuspowerequipment.com
Toll-Free Phone: 800-409-7802

2025 V01

INVERTER GENERATOR **NV4000i** QUICK START GUIDE

2025 V01

UNPACKING

Carefully remove the generator out from the carton / box and place it on the ground or other solid flat surface. Do Not discard the packaging until you have confirmed the following items are present.

1. Oil Bottle (20 fl. oz SAE 10W-30)
2. Oil Funnel with tube
3. Operator's Manual
4. Quick Start Guide



READ AND UNDERSTAND THE OPERATOR'S MANUAL AND ALL SAFETY WARNINGS BEFORE USE

Quick Start Guide Contents

- Unpacking
- Assembly Instructions
- Starting and Operating Procedures


If you require assistance during setup or operation , please contact our customer support team toll-free at (800) 409-7802 or email at support@novuspowerequipment.com

ASSEMBLY

Add Engine Oil


! Important Note: Engine is shipped from the factory without oil. Engine Oil Must be added prior to operating generator.

1. Place the generator on a flat and level surface.
2. Using the supplied funnel and hose, add up to (20 oz / 0.6 L) of oil to the engine. The oil should be near the top thread of the fill neck.
3. Check the oil level using the dipstick. Do Not screw in when checking the oil level.
4. When finished screw in the oil cap / dipstick securely.

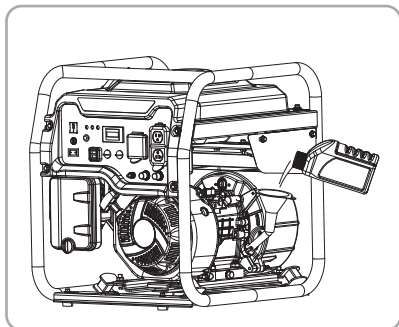

Add fuel

1. Remove fuel cap and slowly add fresh regular unleaded gasoline to the fuel tank.
2. Check the fuel gauge for fuel level. Do Not overfill, A minimum of 1/4" of space is required for fuel expansion.
3. Replace and tighten the fuel cap.
4. Immediately wipe up any spilled fuel.

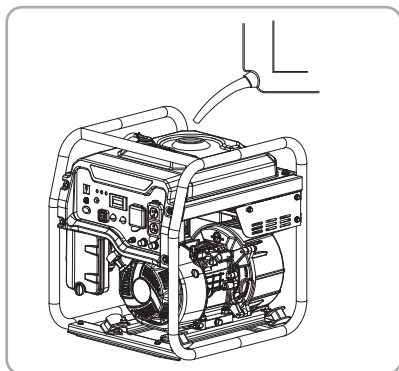

1


3

STARTING AND OPERATING PROCEDURES


This section of the quick start guide provides the basic instructions on how to start and operate your new Inverter Generator. This quick start guide is not a comprehensive guide, we recommend the operator's manual is read and understood before using your new equipment.

Starting the Engine

1. Place the generator on a flat, level and dry surface.
2. Ensure there are no loads connected to the generator.
3. Rotate the fuel valve 90° clockwise into the open position.
4. Pull out the choke knob to close the choke.

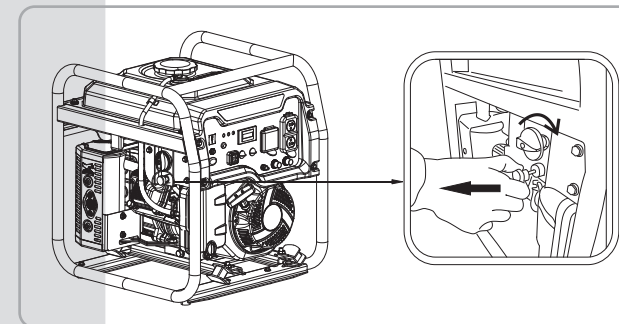

5. Press the engine switch into the "ON" position.

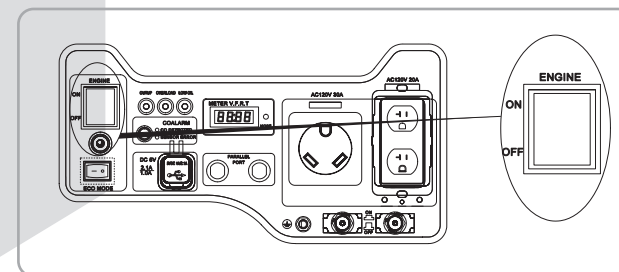


2

4


6

KEY FEATURES

6. Slowly pull on the starter handle until resistance is felt, then pull rapidly.
Note return the starter handle slowly back to the engine to prevent damage to the starter.

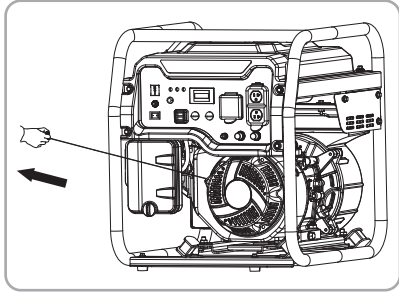

7. Once the engine starts, slowly push in on the choke knob to the "RUN" position.

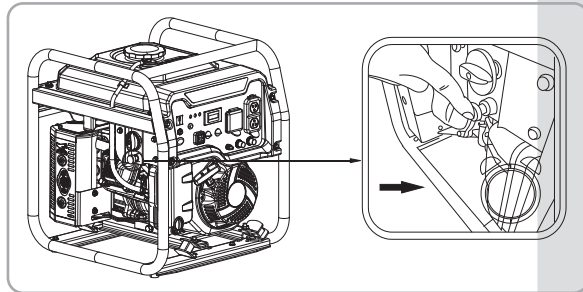

Note: Allow the generator to run for 30 seconds with the engine running smoothly, before connecting an electrical load.

Stopping the Generator

1. Turn Off all electrical appliances connected to the generator.
2. Remove all plugs / cords from the generator.
3. Press the Engine Switch into the "OFF" position.
4. Rotate the fuel valve 90° counterclockwise into the "CLOSE" position.

Note: Allow the generator to cool down prior to moving it to any enclosed area.

5

