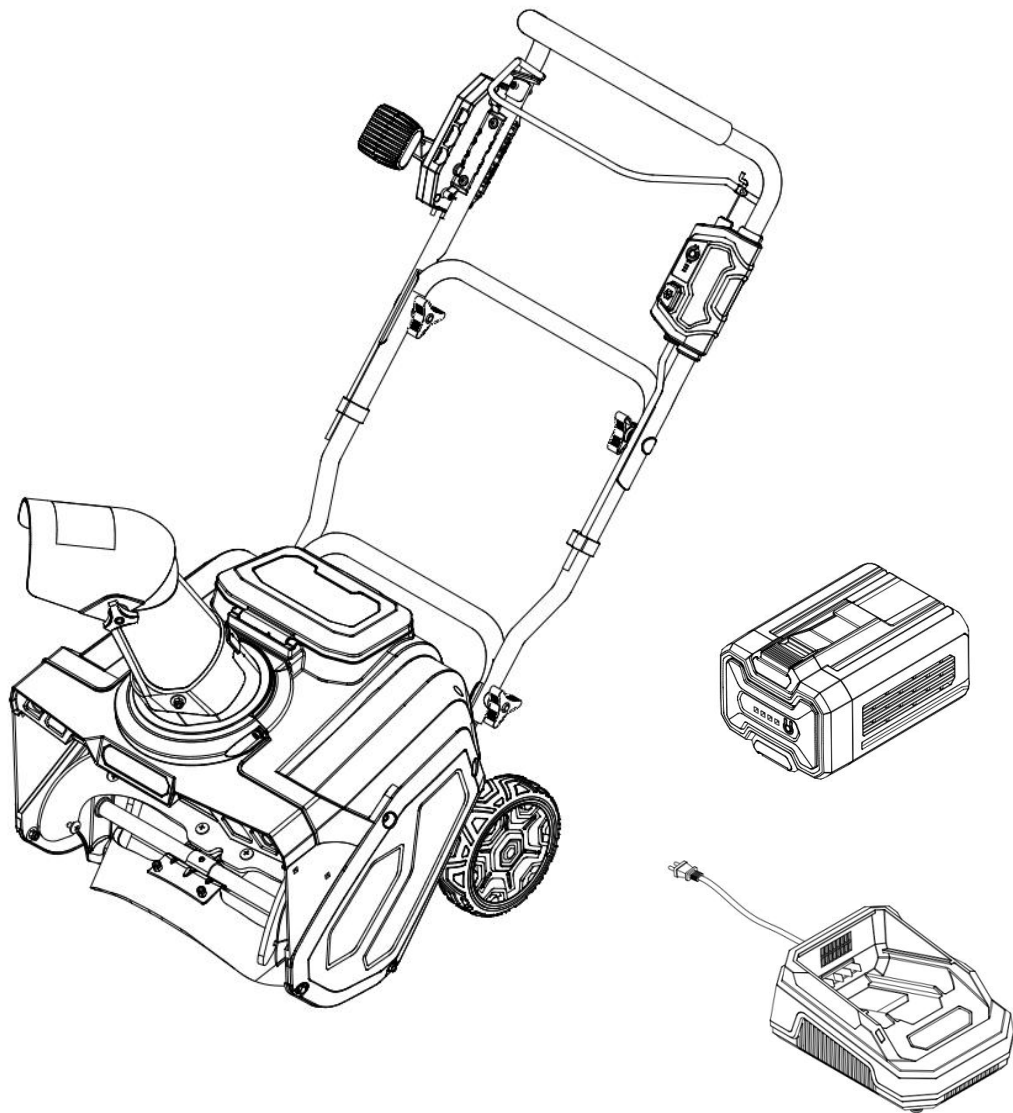
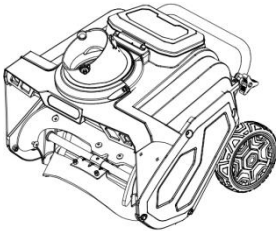
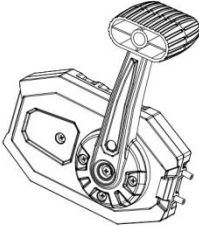


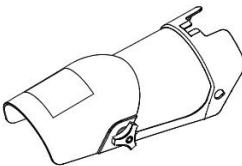
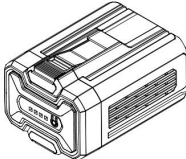


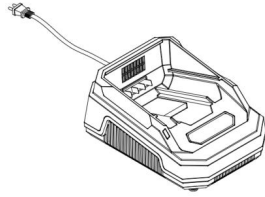


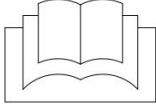
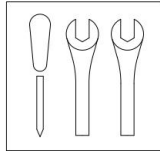
NV18SSB SNOW BLOWER

Quick Start Guide

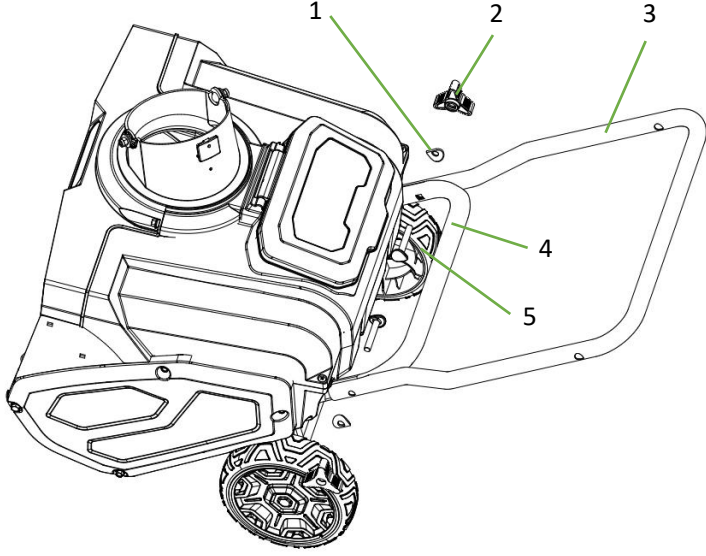
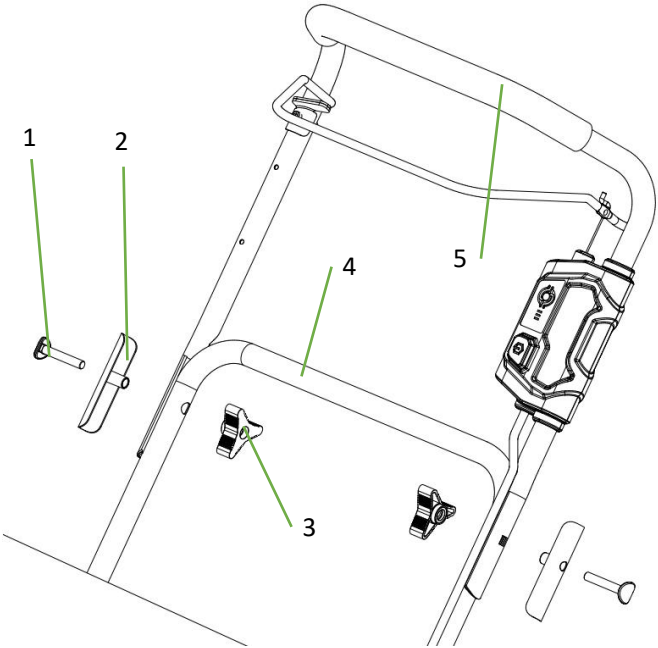


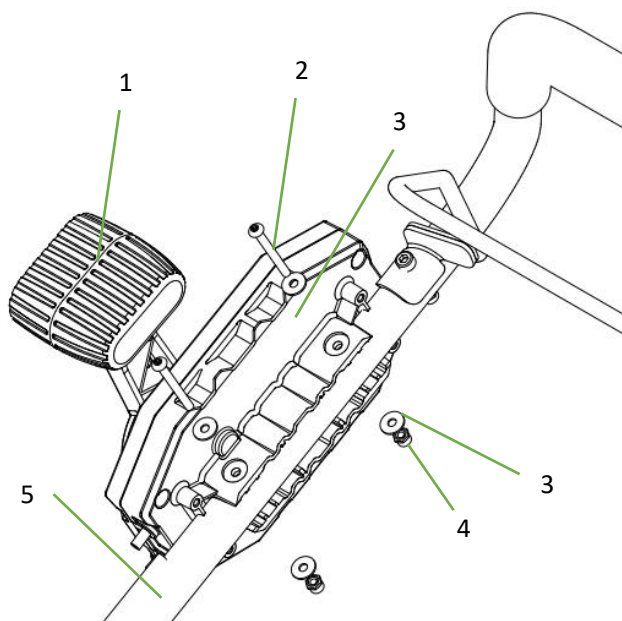
PACKING LIST

No.	Component Name	Picture	Quantity
1	Host Components		1
2	Steering Components		1
3	Handle Connecting Pipe Components		1
4	Upper Handle Components		1
5	Snow Discharge Chute Components		1
6	Battery		1

7	Charger		1
8	Square Neck Bolt Assembly		2
9	Phillips Bolt Assembly		2
10	Operator's Manual		1
11	Toolkit		1

ASSEMBLY

	<ol style="list-style-type: none"> 1. Curved Washer 2. Handle Knob 3. Handle Connecting Pipe 4. Lower Handle 5. Square Neck Bolt <p>◆ Take out the handle connecting pipe, remove the square neck bolts, handle knobs and curved washers on the pipe.</p> <p>◆ Open the opening at the bottom of the handle connecting pipe, and insert it into the left and right holes of the lower handle frame.</p> <p>◆ Insert the square neck bolts into the corresponding holes on both sides, attach the curved washers, and then tighten the handle knobs.</p>
	<ol style="list-style-type: none"> 1. Square Neck Bolt 2. Insulating Pad 3. Handle Knob 4. Handle Connecting Pipe 5. Upper Handle <p>◆ Place the insulating pads in the two holes corresponding to the handle connecting pipe as shown in the picture.</p> <p>◆ Open the opening at the bottom of the Upper Handle (the picture shows the unopened state), insert the handle connecting pipe and align it with the hole.</p> <p>◆ Insert the square neck bolts into the corresponding holes on both sides respectively, and use the handle knob to tighten them.</p>

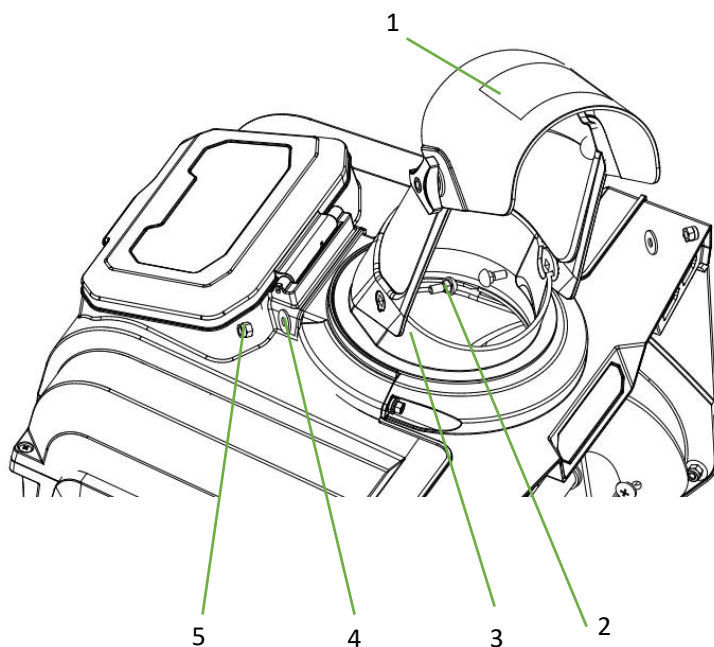


1. Steering Handle Box Assembly
2. Phillips Pan Head Screw
3. Large Washer Class A
4. Type 1 Non-Metallic Insert Hex Lock Nut
5. Upper Handle

◆ Remove the Type 1 non-metallic insert hex lock nut, Class A large washers, and Phillips pan head screws from the instruction manual bag.

◆ Take out the steering handle box assembly from the snow discharge chute and install it in the illustrated position on the upper handle frame.

◆ Use the open-end wrench and yellow dual-purpose screwdriver from the supplied tools to rotate and tighten the Phillips pan head screw.

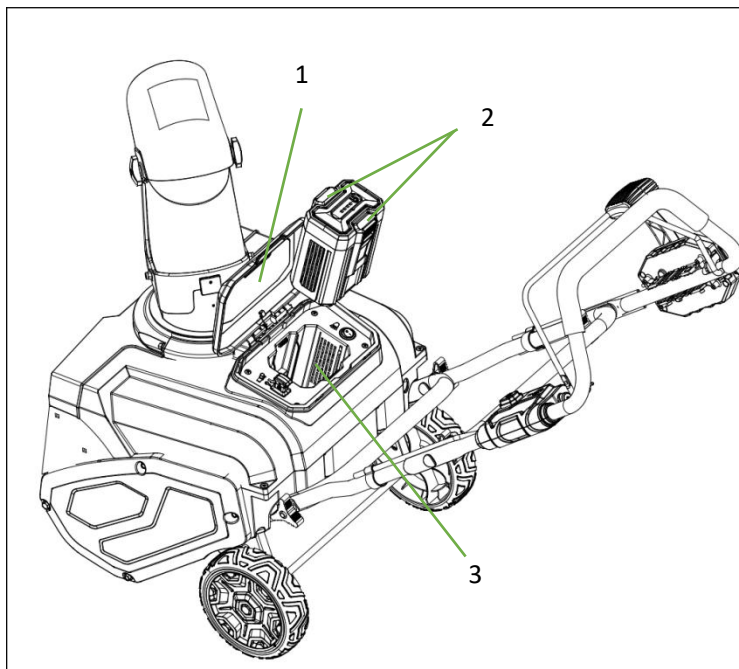


1. Snow Discharge Chute Assembly
2. Round Head Square Neck Bolt
3. Chute Base
4. Large Washer Class A
5. Type 1 Non-Metallic Insert Hex Lock Nut

◆ Remove Type 1 non-metallic insert hex lock nuts, large washers Class A, round head square neck bolts from the chute base.

◆ Take out the discharge chute and chute deflector, put them on the chute base.

◆ Insert the removed bolts and nuts as shown in the figure, and then tighten the nuts.



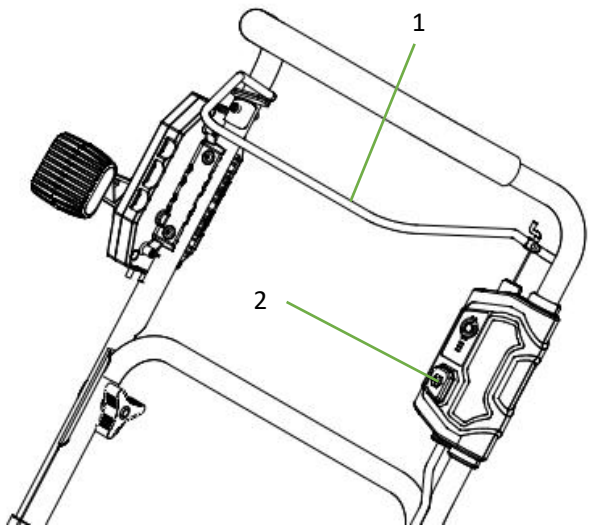
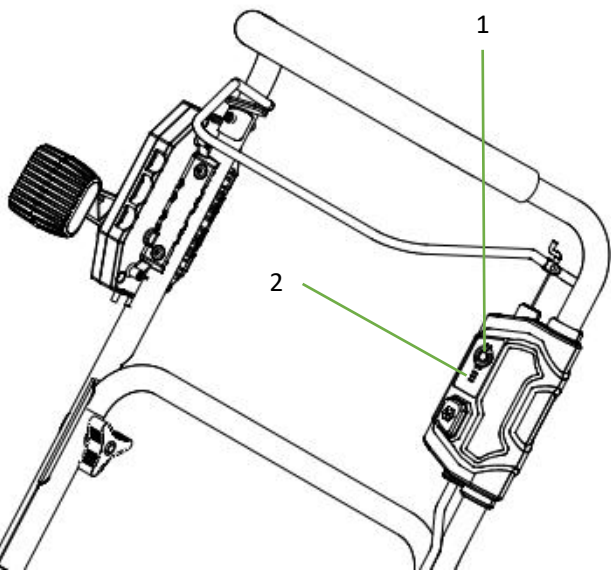
1. Battery Compartment Cover
2. Self-Locking Button
3. Battery Compartment

◆ Open the battery compartment cover.

◆ Simultaneously press the self-locking buttons on both ends of the battery pack to insert it into the battery compartment, press it in to the end and hear a "click".

◆ Close the battery compartment cover.

OPERATION

 <p>A line drawing of the handle of a machine. A green line labeled '1' points to a lever on the right side of the handle. Another green line labeled '2' points to a button located below the lever, also on the right side. On the left side of the handle, there is a large, knurled black knob.</p>	<p>1. Bail Lever 2. Start Button</p> <ul style="list-style-type: none">◆ Press the start button.◆ While pressing the start button, pull back the bail lever.◆ Once the auger starts, release the start button.◆ Release the bail lever to stop the machine.
 <p>A line drawing of the handle of a machine, similar to the one above. A green line labeled '1' points to a button on the right side of the handle. Another green line labeled '2' points to a small light indicator located below the button, also on the right side. On the left side of the handle, there is a large, knurled black knob.</p>	<p>1. Shift Button 2. LED Light</p> <ul style="list-style-type: none">◆ The startup state is the last shutdown gear by default.◆ Manually press the shift button to switch between high and low speed gears.

