


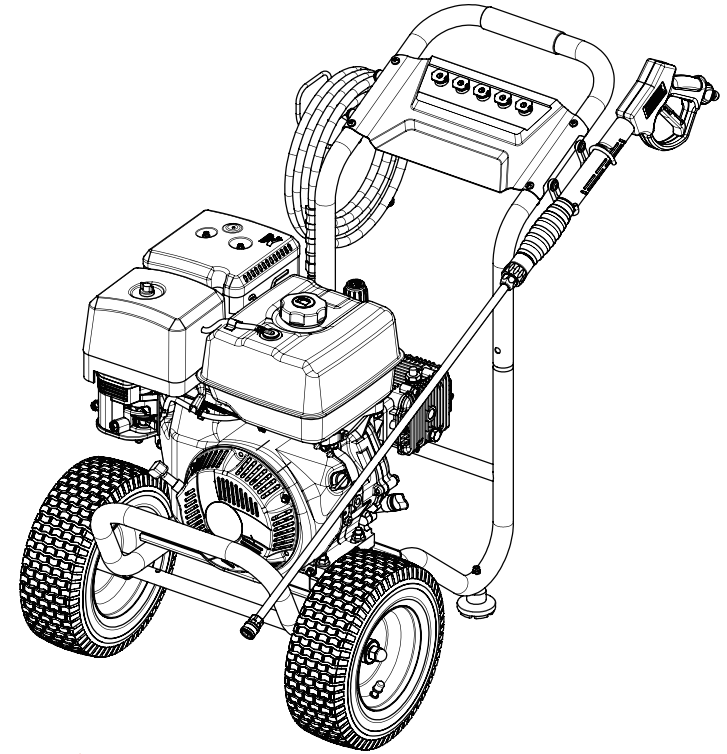

Jackson, Wisconsin
Website: www.novuspowerequipment.com
Email: Support@novuspowerequipment.com
Toll-Free Phone: 800-409-7802


2025 V01

PRESSURE WASHER NV4400PW QUICK START GUIDE

2025 V01

UNPACKING

Carefully remove the Pressure Washer out from the carton/box and place the unit on the ground or other solid surface. Do not discard the packaging until you have confirmed the following items are present.

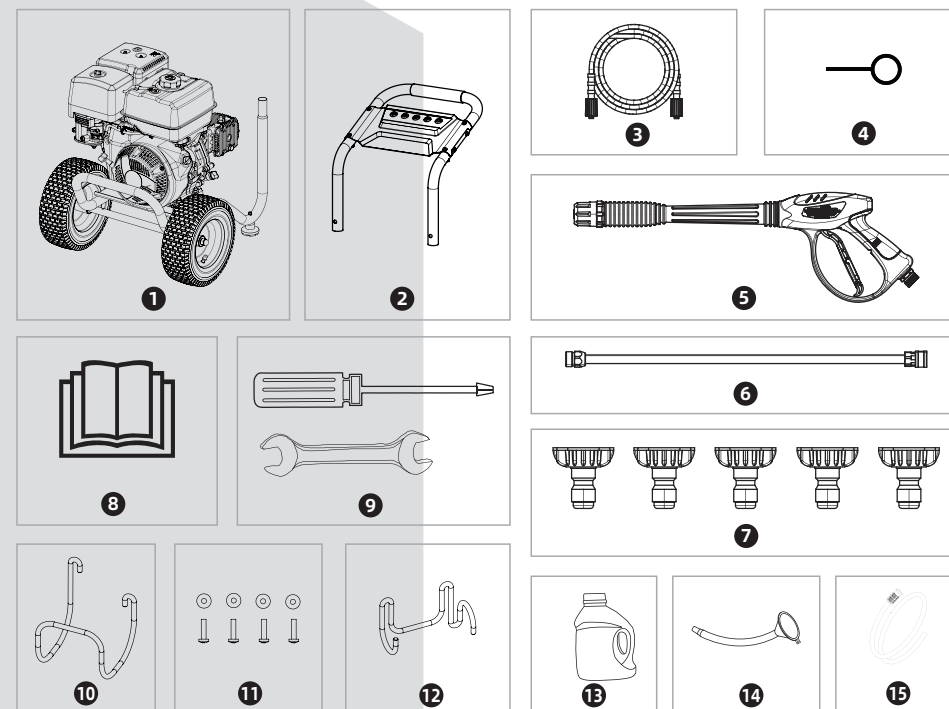

1. Main Unit	9. Tools – Wrench 10/8mm, Screwdriver
2. Upper Handle	10. Wire Hanger – High Pressure Hose
3. High Pressure Hose	11. 4 x M6 Bolts, Washers
4. Nozzle Cleaning Tool	12. Holder – Spray Gun
5. Spray Gun	13. Oil Bottle
6. Spray Wand	14. Oil Funnel with tube
7. Spray Nozzles (5 pcs) 0°, 15°, 25°, 40°, Soap	15. Chemical Injection Tube And Filter
8. Operators Manual & Quick Start Guide	



READ AND UNDERSTAND THE OPERATOR'S MANUAL AND ALL SAFETY WARNINGS BEFORE USE

Quick Start Guide Contents

- Unpacking / Package Contents
- Assembly Instructions
- Starting and Operating Procedures

If you require assistance during setup or operation, please contact our customer support team toll-free at (800) 409-7802 or email at support@novuspowerequipment.com

Please contact our customer support team at 1-800-409-7802 if any of the above loose parts are missing from the carton.

ASSEMBLY

Your Pressure Washer requires limited assembly prior to use. If you have any questions regarding the assembly of this product, call our Technical Support Team at 1-800-409-7802 M-F 8am-4pm CST or by email at support@novuspowerequipment.com Please have your model and serial number available at the time of the call.

Install the Upper Handle

Align the two ends of the upper handle (A) with the two upright tubes of the engine base (B), and then press down firmly until positioning pins pop into place on both sides. Fig 1

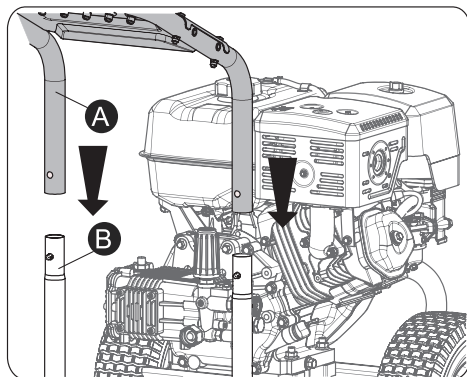


Fig 1

Install the high-pressure hose hook and spray gun hook

a. Install the High-pressure Hose holder (C) onto the left side of the upper handle using two M6x25 mm Phillip head screws (A) and two M6 flat washer (B). Hand tighten.

b. Install the Spray Gun holder (D) onto the right side of the upper handle using two M6x25 mm Phillip head screws (A) and two M6 flat washers (B). Hand tighten. Fig 2

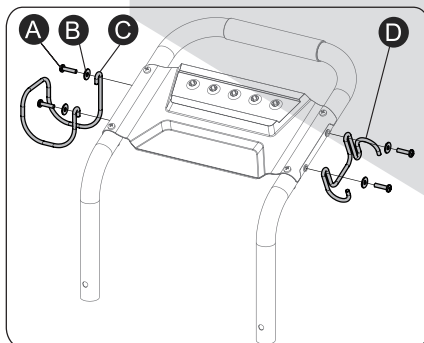


Fig 2

3

Press the spray nozzles into their corresponding color matched openings on the pressure washer's top panel. See Fig 3

(A) Red = 0°, (B) Orange = 15°, (C) Green = 25°, (D) White = 40°, (E) Black = Soap

Spray Nozzles

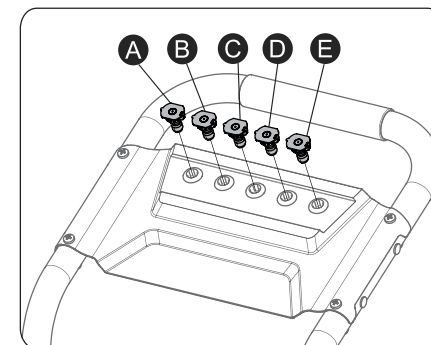


Fig 3

4

Remove the red shipping plug from the Pump and replace with the included Pump Oil Dipstick. Fig 4

Pump Assembly

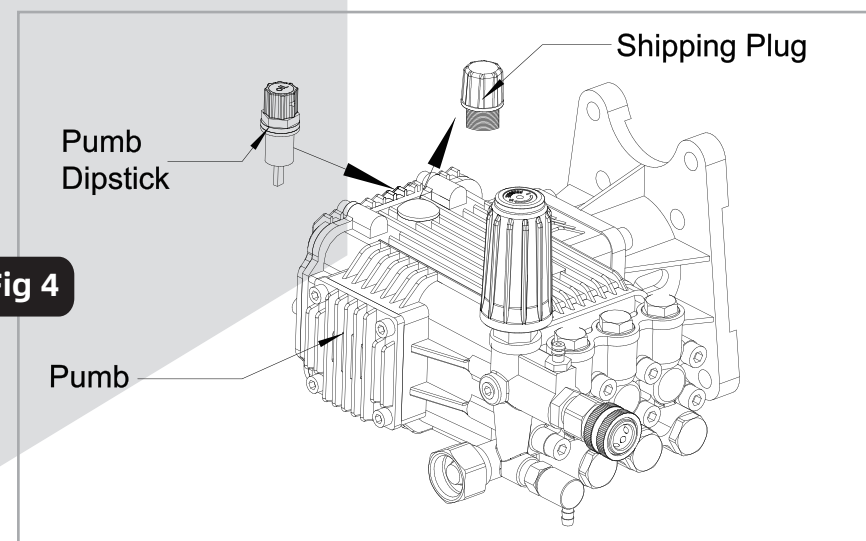


Fig 4

Add Engine Oil

1. Place the unit on a flat, level surface.
2. Remove the oil dipstick by turning counterclockwise.
3. Using a funnel, add 37.oz. (1.1L) of oil to the engine. The oil should be near the top thread of the filler neck.
4. Check the oil level using the dipstick. DO NOT screw in when checking.
5. When finished screw in the dipstick securely. Fig 5

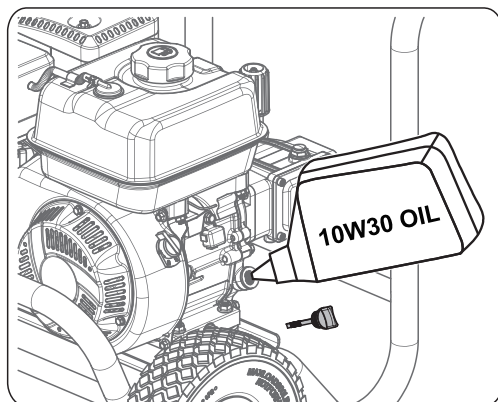


Fig 5

Add Fuel

1. Slowly add fresh, regular unleaded gasoline containing 10% or less ethanol to the tank until it reaches the Red fuel level indicator of the fuel screen. DO NOT overfill. A minimum of ¼ in. (6.4 mm) of space left in the tank is required for gasoline expansion. Fig 6
2. Replace and tighten the fuel tank cap.
3. Immediately wipe up any spills.

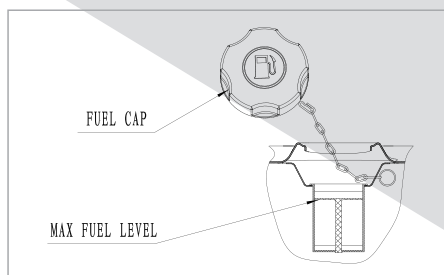


Fig 6

5

7

Assemble spray gun and high-pressure hose.

- a. Attach the spray wand onto the gun by rotating the coupler nut clockwise until hand tight. Do not overtighten. Figure 7

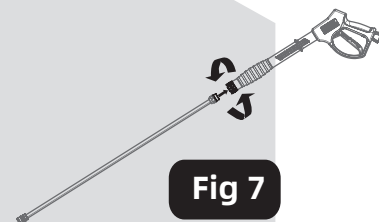


Fig 7

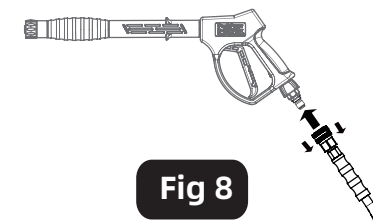


Fig 8

- b. Attach the high-pressure hose to the spray gun by pulling back on the quick connect collar of the high-pressure hose, slide the fitting on the spray gun into the quick connect and release the collar. Pull firmly on the hose to ensure it is secure. Figure 8

- c. Uncoil and straighten the high-pressure hose to prevent kinks. Connect the open end of the high-pressure hose to the high-pressure outlet by pulling the quick connect collar back, inserting the high-pressure hose and releasing the collar. Pull firmly on the hose to ensure it is secure. Fig 9

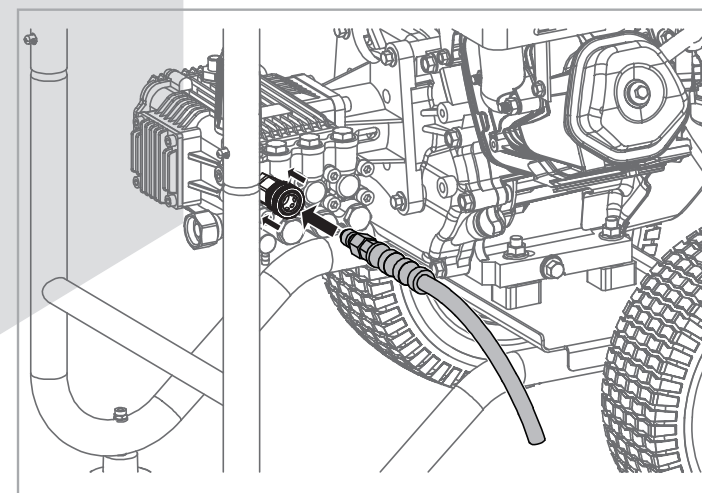


Fig 9

6

Connect Water Supply - Garden Hose.

With the water turned off, connect the garden hose to the water inlet by turning the coupler counterclockwise and tighten by hand. Fig 10

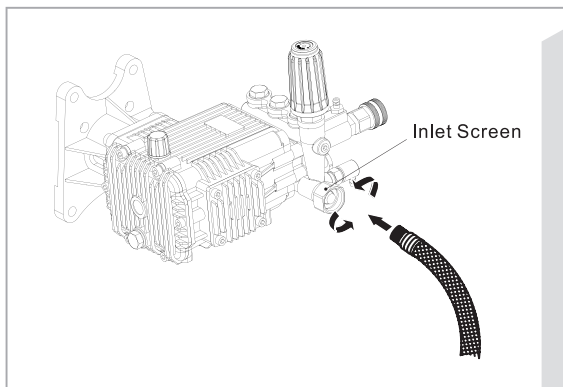


Fig 10

Connect Spray Nozzle

1. Engage the trigger safety lock on the spray gun.
2. Select a spray nozzle according to your cleaning needs. Fig 11
3. Pull back on the spray wand quick connect collar and insert the desired spray tip and release the collar. Tug on the spray tip to ensure it is firmly secure. Fig 12

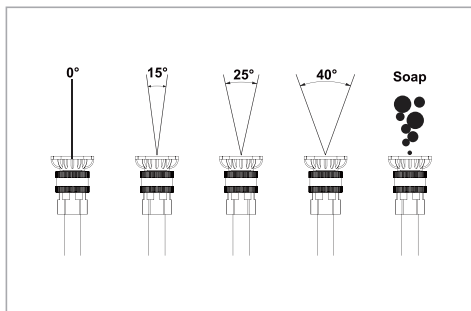


Fig 11

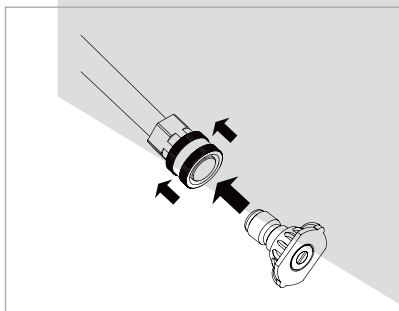


Fig 12

Congratulations, your machine is now ready to operate. Please read the entire operator's manual for full safety and operations guidelines.

Starting and Operating Procedures

This section of the quick start guide provides the basic instructions on how to start and operate your new water pump. This quick start guide is not a comprehensive guide, we recommend the operator's manual is read and understood before using your new equipment.


!!! IMPORTANT INFORMATION

Prior to attempting to start the engine the water supply must be connected to the pump and turned on.

STARTING THE ENGINE

1. Check oil level and add oil if necessary.
2. Make certain the unit is on a flat, level surface.
3. Slide the Choke Lever (A) to the full CHOKE position (Fully Left).
4. Move the Fuel Valve lever (B) to the ON position (Fully Right).
5. Turn the Engine ignition switch (C) to the ON position. Fig 13

Fig 13

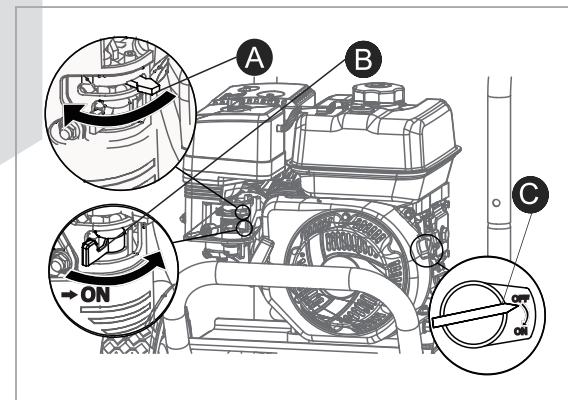

6. Pull the starter handle slowly until resistance is felt, then pull rapidly. Note: Return the starter handle slowly back to the engine to prevent damage to the starter.

7. Once the engine starts, slowly slide the CHOKE lever to the OFF position. (Fully Right). Fig 14

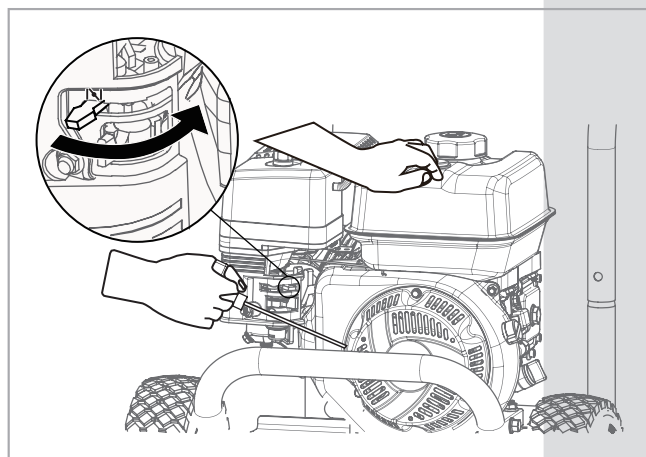


Fig 14

Stopping the Engine

In an Emergency:

Turn the engine switch to the “OFF” position.

Under Normal Operation:

1. Move the Fuel Valve Lever fully to the left. (OFF position).
2. Turn the engine ignition Switch to the “OFF” position. Fig 15

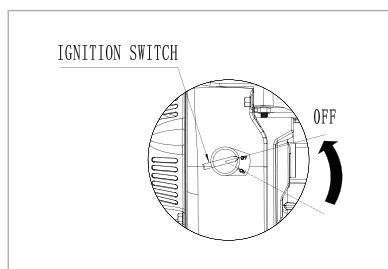





Fig 15

PRESSURE WASHING

Once the engine starts, firmly grasp the spray gun with both hands. Point the spray gun in a safe direction, disengage the spray gun trigger lock by pressing down until it clicks into the back of the trigger.

a. Depress the spray gun trigger to begin spraying.

b. Release the trigger to stop spraying.

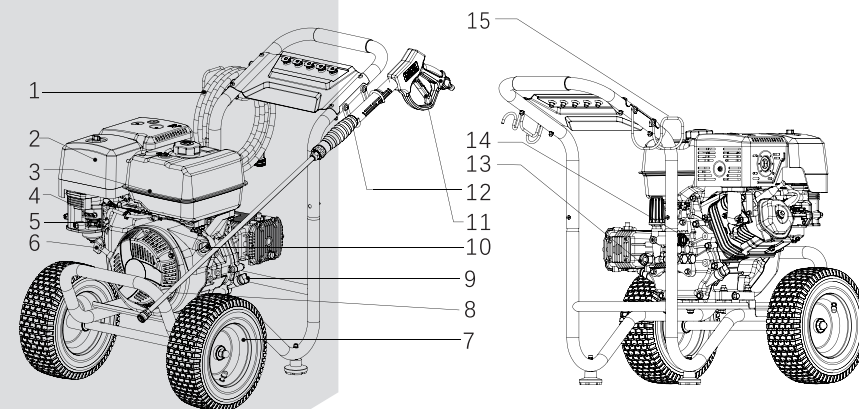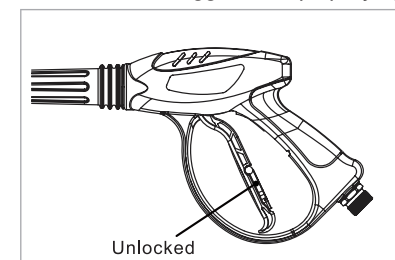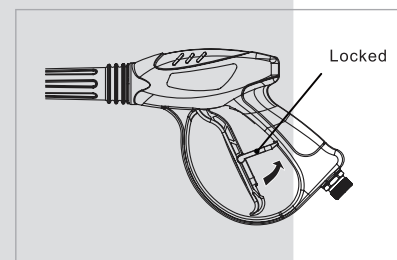

1. High Pressure Hose	9. Oil Dipstick / Fill Cap
2. Air Filter	10. Ignition ON / OFF Switch
3. Fuel Tank	11. Spray Gun
4. Choke Lever	12. Spray Gun Holder
5. Fuel Valve Lever	13. Garden Hose Inlet
6. Recoil Start Handle	14. High Pressure Hose Outlet
7. Wheel	15. High Pressure Hose Holder
8. Spray Wand	